




Dimensions in mm

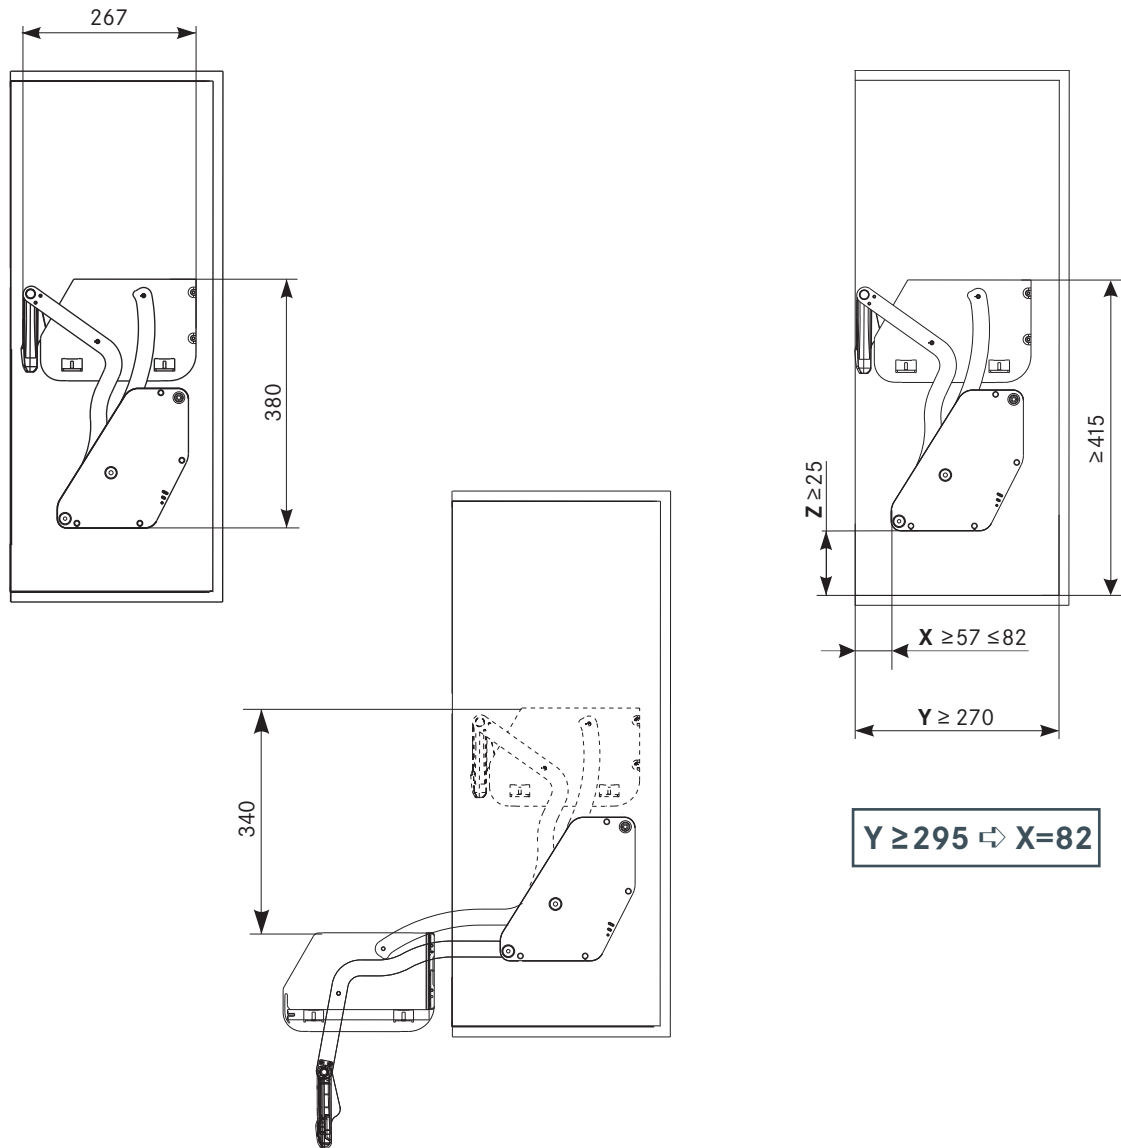

Drilling pattern for positioning tabs

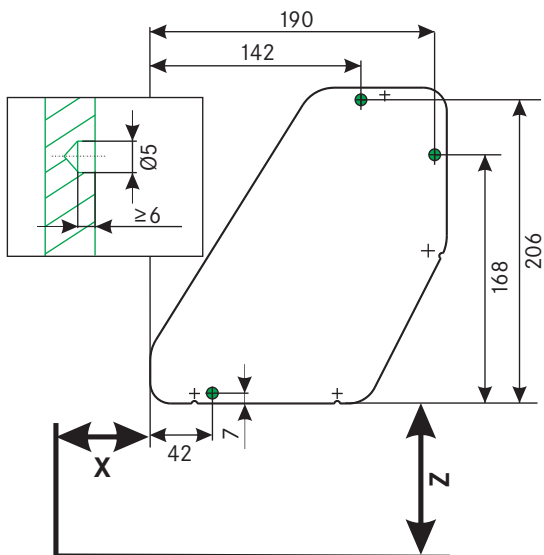

Drilling pattern for euro screws

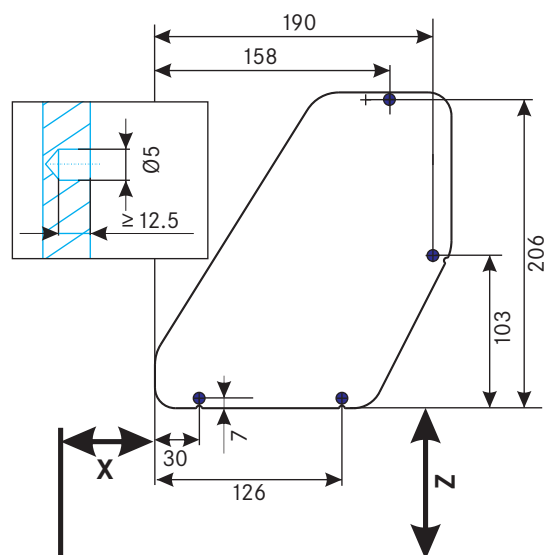

iMove · Single Tray

Installation situation

Dimensions (mm)	Hinged door	Hinged door	FREEfold	Blum Aventos HF
Hinge protrusion	< 25	> 25	–	–
Installation height, hinge	65	65	–	–
Installation depth, iMove	57	57	82	82
Installation height, iMove	25	80	25	25
Clear inside depth, carcase	270	270	295	295
Minimum height, carcase*	470	580	650	650

* Carcase heights vary with the individual installation situations.

iMove set single tray

Including fixings:

8 x wood screws 4.5 x 50 mm

1 x drilling template

Silver	0102
Brilliant white	9966
Satin gold	0103
Anthracite	9846

Carcase width (mm)	Clear inside carcase width (mm)	Dimensions (mm) B x D x H	Art. no.
500	462-468	465 x 267 x 380	02 1700
600	562-568	565 x 267 x 380	02 1702
800	762-768	765 x 267 x 380	02 1704
900	862-868	865 x 267 x 380	02 1706

